



This PDF is generated from authoritative online content, and is provided for convenience only. This PDF cannot be used for legal purposes. For authoritative understanding of what is and is not supported, always use the online content. To copy code samples, always use the online content.

Integration Reference Manual

Configuring DN Objects

12/16/2025

Contents

- 1 Configuring DN Objects
 - 1.1 1. Configuring a Voice over IP Service DN
 - 1.2 2. Configuring a Trunk DN
 - 1.3 3. Configuring Extension DNs
 - 1.4 4. Configuring Routing Point DNs

Configuring DN Objects

You configure DN objects for the OpenScape Voice in the Configuration Layer under the Switch object that is assigned to the appropriate SIP Server.


1. [Configure a Voice over IP Service DN](#)
2. [Configure a Trunk DN](#)
3. [Configure Extension DNs](#)
4. [Configure Routing Point DNs](#)

1. Configuring a Voice over IP Service DN

Purpose: To configure a DN of type Voice over IP Service that specifies the connection and options for OpenScape Voice communication with a SIP Server that is running in Application Server (B2BUA) mode.

Start

1. In Configuration Manager, under a configured Switch object, select the DNs folder. From the File menu, select New > DN to create a new DN object.
2. In the New DN Properties dialog box, click the General tab, and then specify the following properties:
 - a. Number: Enter the softswitch name—for example, OpenScape Voice. Although this name is currently not used for any messaging, it must still be unique.
 - b. Type: Select Voice over IP Service from the drop-down box.

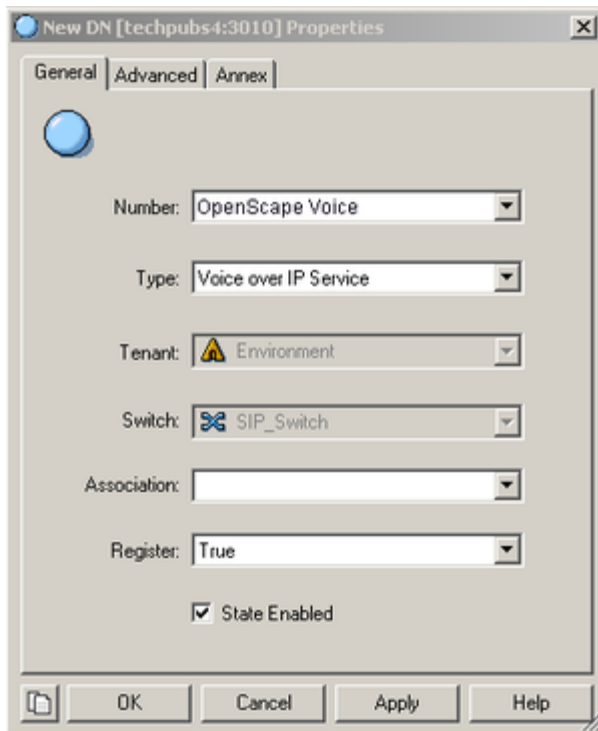

Creating a Voice over IP Service DN for OpenScape Voice: Sample Configuration


- c. Click the Annex tab.
- d. Create a section that is named TServer. In the TServer section, create options as specified in the following table.

Option Name	Option Value	Description
contact	<ipaddress>:<SIP port>	<p>The contact URI that SIP Server uses for communication with the OpenScape Voice softswitch, where <ipaddress> is the IP address of the softswitch and <SIP port> is the SIP port number of the softswitch.</p> <p>TLS configuration: use the following format: contact =<ipaddress>:<SIP port>;transport=tls</p> <p>For more information about how to configure SIP Server, see the Transport Layer Security for SIP Traffic section in the <i>SIP Server Deployment Guide</i>.</p>
dual-dialog-enabled	false	Set this option to false if Siemens phones are used in re-INVITE mode for third-party call-control (3pcc) operations.

Option Name	Option Value	Description
makecall-subst-uname	1, or none	For OpenScape Voice version 2.1, set this option to 1. For OpenScape Voice version 2.2 and later, do not configure this option. When this option is set to 1, SIP Server sets the From header to the same value as the To header in the INVITE request, to work around issues with pre-2.2 versions of OpenScape Voice.
make-call-rfc3725-flow	1	Set this option to 1. When this option is set to 1, SIP Server selects the SIP call flow number 1 (described in RFC 3725) for a call that is initiated by a TMakeCall request.
refer-enabled	false	Set this option to false for SIP Server to use a re-INVITE request method when contacting the softswitch. This is the only method that is supported in the OpenScape Voice configuration.
ring-tone-on-make-call	true	When this option is set to true, SIP Server connects the caller with an audio ringtone from Stream Manager when the destination endpoint responds with a 180 Ringing message.
service-type	softswitch	Set this option to softswitch.
sip-cti-control	talk	<p>When this option is set to talk, SIP Server instructs the endpoint to go off-hook by sending a SIP NOTIFY message with the Event: talk header. This enables a TAnswerCall request to be sent to SIP Server. SIP Server then sends the NOTIFY message to the switch. Setting this option to talk sets the default for all endpoints that are configured with this softswitch. The talk value is supported only on OpenScape Voice version 2.2 Patchset 14 or later.</p> <p>Note: You must also configure OpenScape Voice to support this</p>

Option Name	Option Value	Description
		functionality. See Configuring Click-to-Answer .
sip-ring-tone-mode	1	When this option is set to 1, SIP Server waits for a response from the called device, and connects Stream Manager to a call to play an audio ring tone only when the returned response cannot be used as the offer to a calling device.

- e. When you are finished, click Apply.

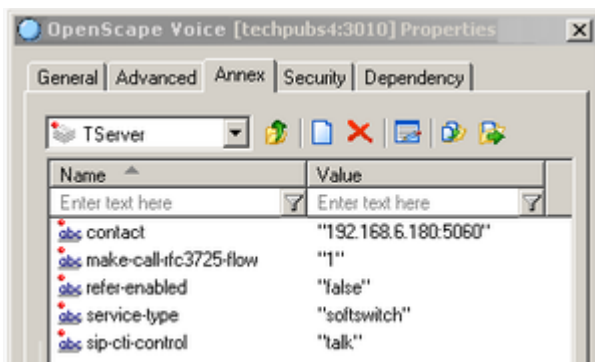

Setting Options for a Voice over IP Service DN:
Sample Configuration


End

2. Configuring a Trunk DN

Purpose: To configure a DN of type Trunk that specifies how SIP Server handles outbound calls. It is also used for configuration of gateways, SIP proxies (including connections to other instances of SIP Server), and other SIP-based applications. From the SIP Server perspective, OpenScape Voice in Application Server (B2BUA) mode is considered a gateway or SIP proxy.

Start

1. Under a configured Switch object, select the DNs folder. From the File menu, select New > DN to create a new DN object.
2. In the New DN Properties dialog box, click the General tab, and then specify the following properties:
 - a. Number: Enter a name for the Trunk DN. This name can be any unique value, and it can be a combination of letters and numbers.
 - b. Type: Select Trunk from the drop-down box.

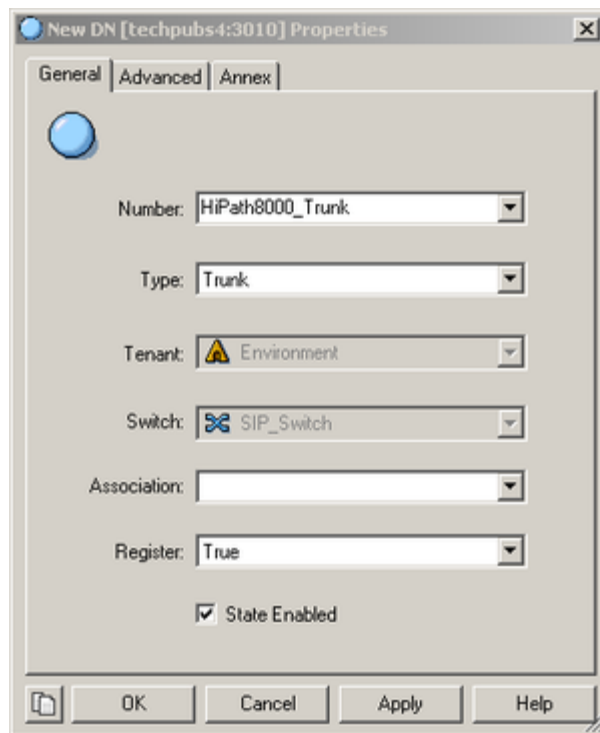


Creating a Trunk DN for OpenScape Voice: Sample Configuration

3. Click the Annex tab.
4. Create a section that is named TServer. In the TServer section, create options as specified in the following table.

Option Name	Option Value	Description
contact	<ipaddress>:<SIP port>	The contact URI that SIP Server uses for communication with the OpenScape Voice softswitch, where <ipaddress> is the IP address of the softswitch and <SIP port> is the SIP port number of the softswitch.
prefix	Any numerical string	The initial digits of the number that SIP Server matches to determine whether this trunk should be used for outbound calls. For example, if prefix is set to 78, dialing a number that starts with 78 will cause SIP Server to consider this trunk a gateway or SIP proxy. If multiple Trunk objects match the prefix, SIP Server will select the one that has the longest prefix that matches.
refer-enabled	false	Set this option to false for SIP

Option Name	Option Value	Description
		Server to use a re-INVITE request method when contacting the softswitch. This is the only method that is supported in the OpenScape Voice configuration.
replace-prefix	Any numerical string	The digits (if necessary) that replace the prefix in the DN. For example, if prefix is set to 78, and replace-prefix is set to 8, the number 786505551212 will be replaced with 86505551212 before it is sent to the gateway or SIP proxy (in this case, OpenScape Voice).

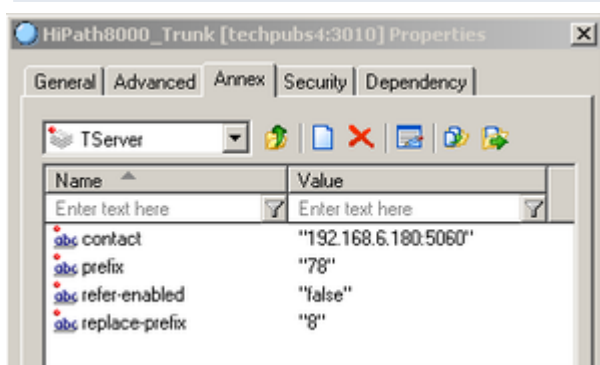

Setting Options for a Trunk DN: Sample Configuration

- When you are finished, click Apply.

End

3. Configuring Extension DNs


Purpose: To configure DNs of type Extension that represent agent phone extensions and register directly with the softswitch.

When you configure an extension where the phone registers directly with SIP Server, you must configure options in the TServer section on the Annex tab. However, if you are using a softswitch in Application Server (B2BUA) mode, SIP Server takes the Extension DN name together with the value of the contact option in the softswitch object configuration (not the Extension object) to access the phone. This procedure describes the configuration for phones that are registered directly with OpenScape Voice and not with SIP Server. As a result, SIP Server sends the request to OpenScape Voice to communicate with the phone.

Start

- Under a configured Switch object, select the DNs folder. From the File menu, select New > DN to create a new DN object.

2. In the New DN Properties dialog box, click the General tab, and then specify the following properties:
 - a. Number: Enter a name for the Extension DN. In general, this should be the 10-digit phone number of the extension. You must not use the @ symbol or a computer name. The name of this DN must map to the SIP user name of the extension in OpenScape Voice.
 - b. Type: Select Extension from the drop-down box.

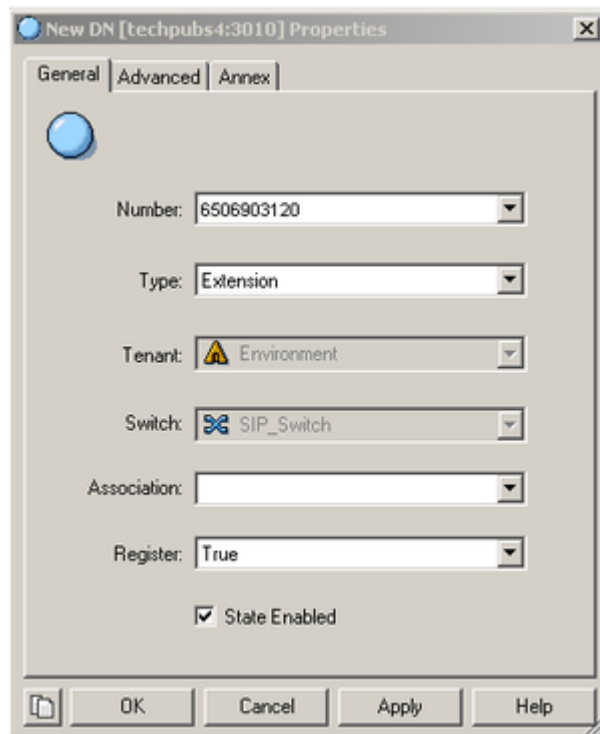

The screenshot shows a dialog box titled "New DN [techpubs4:3010] Properties" with three tabs: General, Advanced, and Annex. The General tab is selected. It contains a blue sphere icon at the top left. Below it are several fields: "Number" with the value "6506903120", "Type" with a dropdown menu showing "Extension", "Tenant" with a dropdown menu showing "Environment" and a warning icon, "Switch" with a dropdown menu showing "SIP_Switch" and a lock icon, "Association" with an empty dropdown menu, and "Register" with a dropdown menu showing "True". At the bottom of the fields is a checked checkbox labeled "State Enabled". At the very bottom are four buttons: "OK", "Cancel", "Apply", and "Help".

Creating an Extension DN for OpenScape Voice: Sample Configuration

- c. When you are finished, click Apply.

Note: No configuration options are required for the Extension DN. Adding configuration options—such as contact, password, refer-enabled, and others—might cause unexpected results.

End


4. Configuring Routing Point DNs

Purpose: To configure a DN of type Routing Point that is used to execute a routing strategy with Genesys URS. When SIP Server receives an INVITE request on a DN that is configured as a Routing Point, it sends an EventRouteRequest message to URS.

Start

1. Under a configured Switch object, select the DNs folder. From the File menu, select New > DN to create a new DN object.
2. In the New DN Properties dialog box, click the General tab, and then specify the following properties:

- a. Number: Enter a number for the Routing Point DN. This number must be configured on OpenScape Voice.
- b. Type: Select Routing Point from the drop-down box.

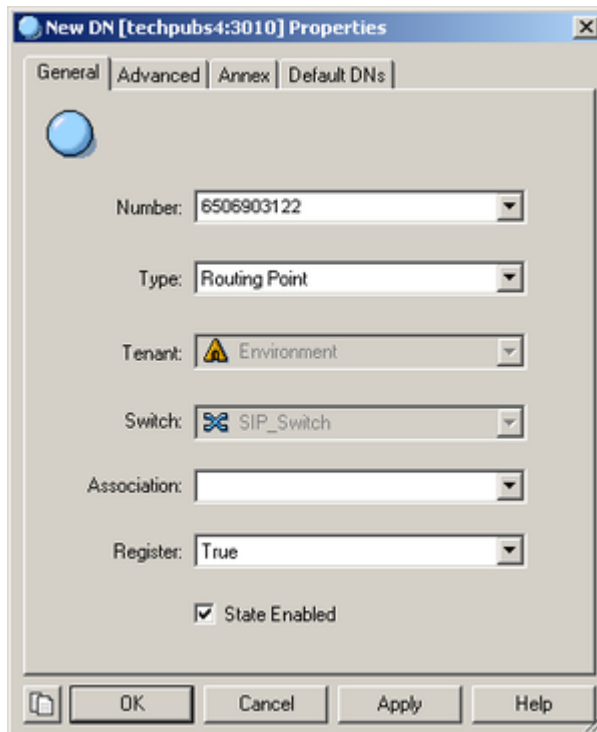

The screenshot shows a dialog box titled "New DN [techpubs4:3010] Properties" with a close button (X) in the top right corner. The "General" tab is selected, showing a blue sphere icon. Below the icon are several configuration fields: "Number" with a dropdown menu showing "6506903122"; "Type" with a dropdown menu showing "Routing Point"; "Tenant" with a dropdown menu showing a warning icon and "Environment"; "Switch" with a dropdown menu showing a SIP icon and "SIP_Switch"; "Association" with an empty dropdown menu; and "Register" with a dropdown menu showing "True". At the bottom of the form area is a checkbox labeled "State Enabled" which is checked. At the bottom of the dialog are buttons for "OK", "Cancel", "Apply", and "Help".

Creating a Routing Point for OpenScape Voice:
Sample Configuration

- c. When you are finished, click Apply.

Although no configuration options are required for the Routing Point, URS does look at options to determine how to handle the Routing Point and what strategy is currently loaded. For details about these options, see the *Genesys 8.x Universal Routing Server Reference Guide*.

End